




WEY COFFEE 02
SUV
From 11/2022

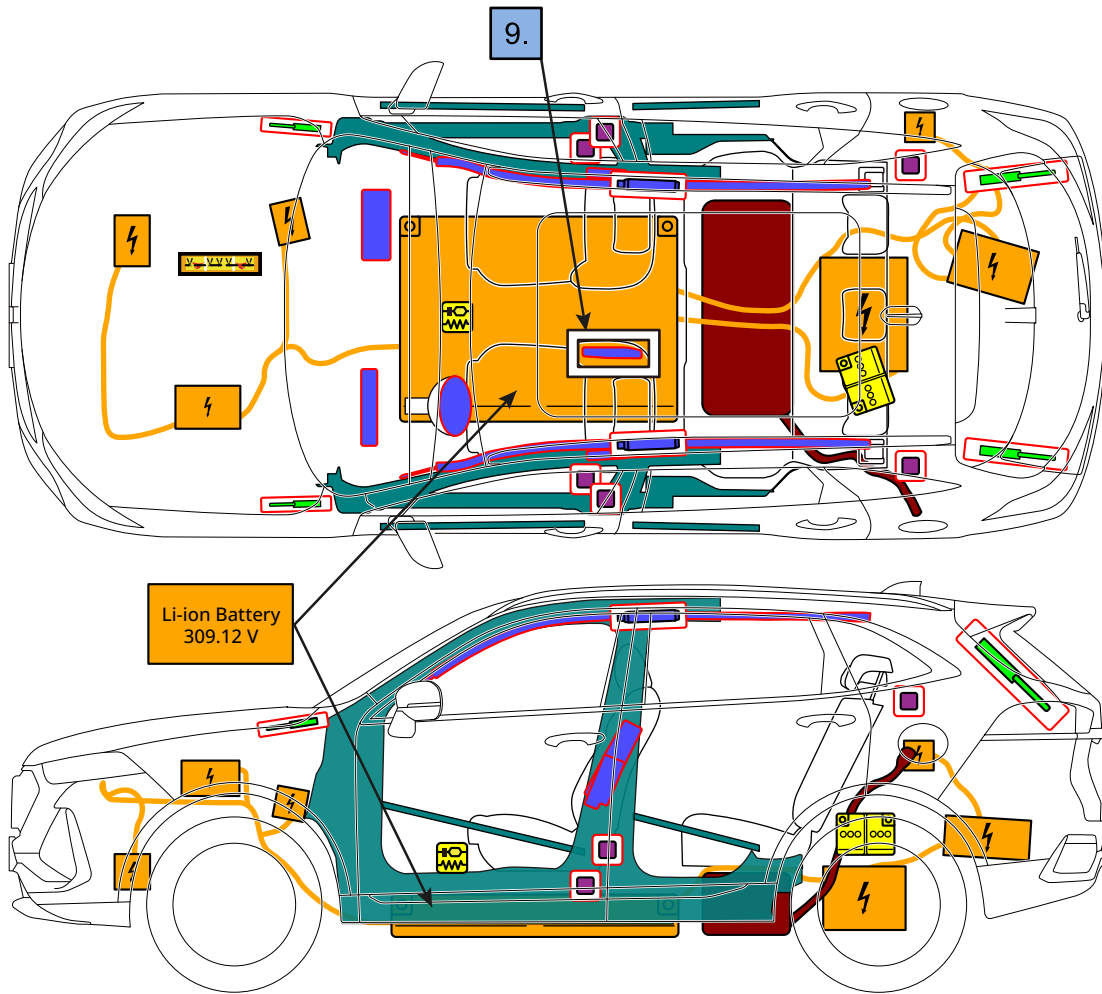


Legend

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Battery low voltage
	Gas strut/Preloaded spring		High strength zone		Zone requiring special attention		High voltage battery pack		High voltage power cable/component
	Cable cut		Fuel tank content gasoline/ethanol		High voltage component				

This overview shows the maximum range of equipment of the vehicle.

ID No.	Version No.	Page No.
LGW-WEY-V61PHEVG	V2	1/4

	<p>WEY COFFEE 02 SUV From 11/2022</p>		
---	--	---	--


1. Identification / recognition

 LACK OF ENGINE NOISE DOES NOT MEAN VEHICLE IS OFF. SILENT MOVEMENT OR INSTANT RESTART CAPABILITY EXISTS UNTIL VEHICLE IS FULLY SHUT DOWN. WEAR APPROPRIATE PPE.




2. Immobilisation / stabilisation / lifting

Immobilise and stabilise the vehicle

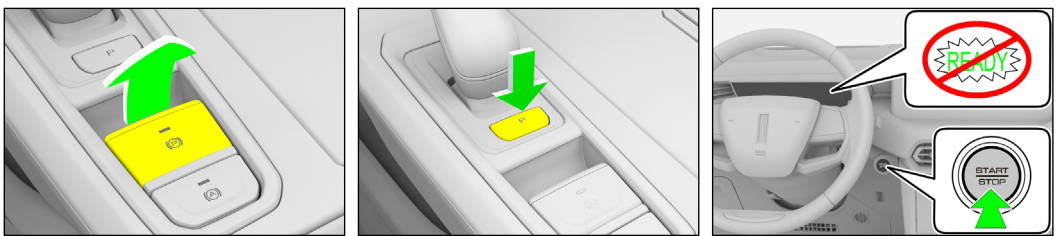


- Apply parking brake;
- Press "P" button;
- Shut power off.

Lifting points

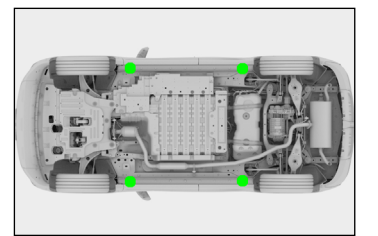


3. Disable direct hazards / safety regulations


MAIN DISABLING METHOD

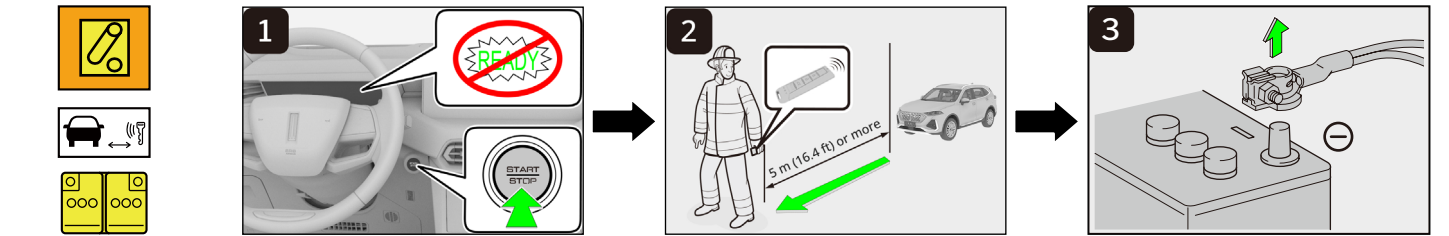


ALTERNATIVE DISABLING METHOD

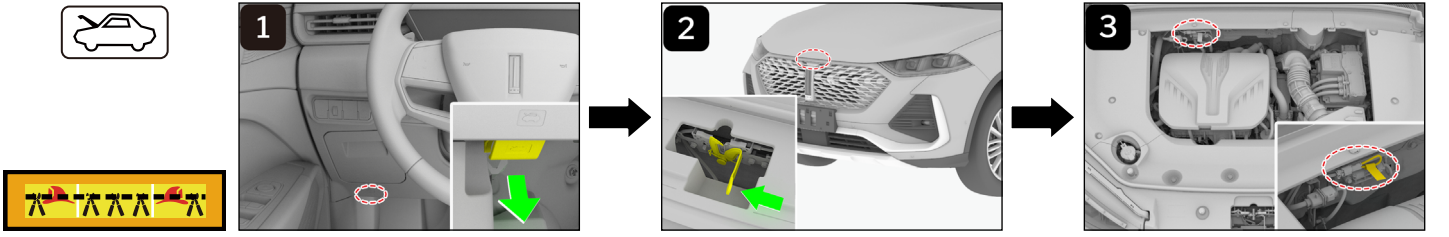

ACCESS TO 12V BATTERY

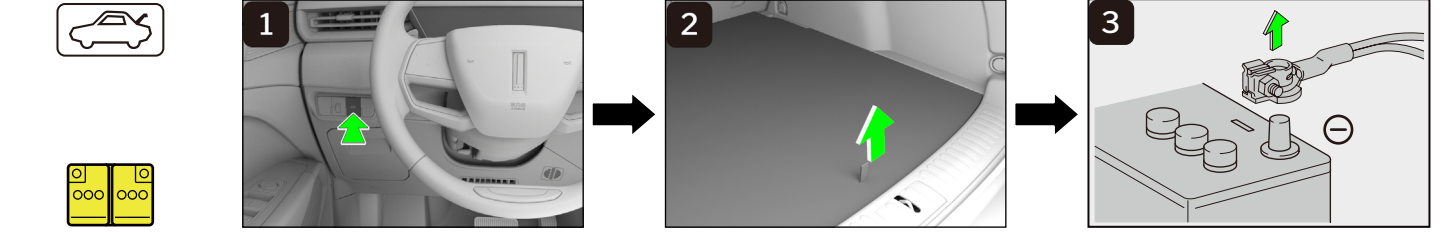


	WEY COFFEE 02 SUV From 11/2022		
---	---	---	--




4. Access to the occupants

WHEN THE 12 V BATTERY IS DISCONNECTED, ELECTRICAL COMPONENTS CANNOT BE OPERATED.



High strength zone

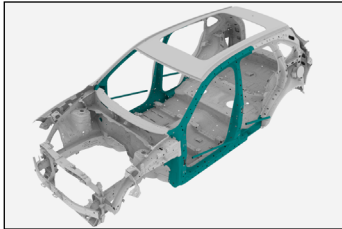



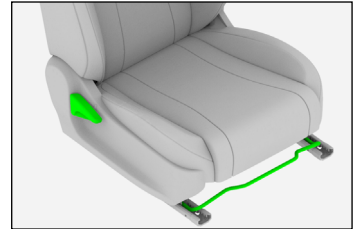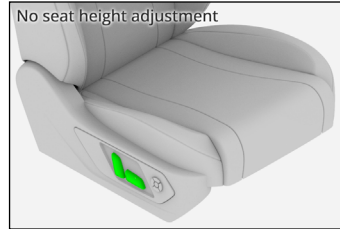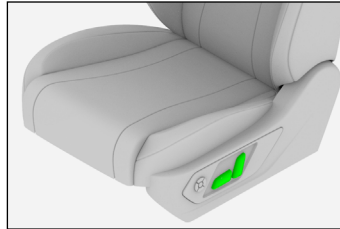



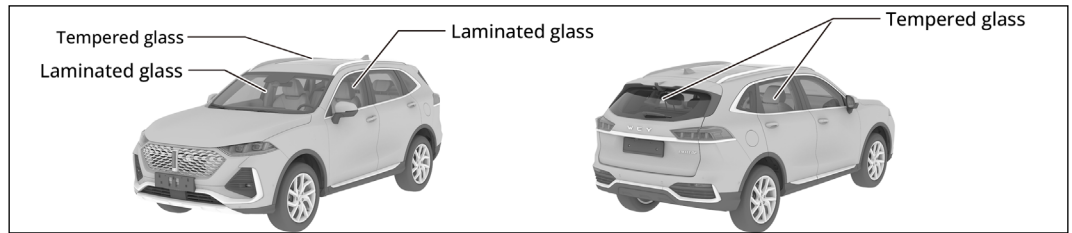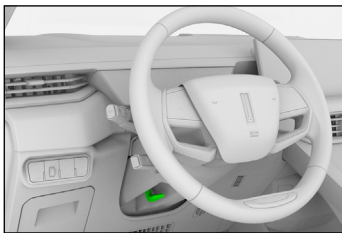

Seat adjustment




Steering column adjustment Glass types



5. Stored energy / liquids / gases / solids

		12 V Battery
		309.12 V
		55 L
		680±10 g

6. In case of fire

 USE LARGE AMOUNTS OF WATER.	If it is difficult to apply copious amounts of water to the high voltage battery, it is recommended to allow the high voltage battery to burn itself out.
---	---

 BATTERY RE-IGNITION!	
---	--

7. In case of submersion

Proper personal protective equipment should be worn when handling any flooded vehicle. Pull the vehicle out of water as much as possible, immobilise the vehicle and disable the vehicle before starting any operation (see chapter 3).


Tilt the vehicle to one side to allow water to drain out of the vehicle.

This overview shows the maximum range of equipment of the vehicle.	ID No.	Version No.	Page No.
	LGW-WEY-V61PHEVG	V2	3/4


	WEY COFFEE 02 SUV From 11/2022		
---	---	---	--

8. Towing / transportation / storage

Location front hook

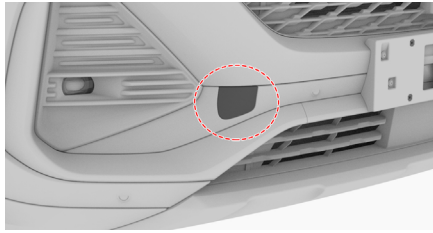

Location rear hook

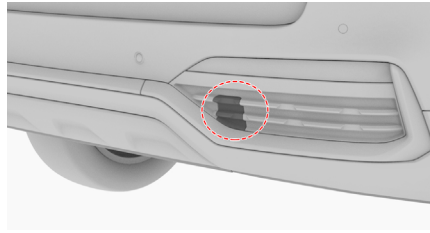


STORE AT SAFE DISTANCE FROM OTHER VEHICLES !








BATTERY RE-IGNITION !

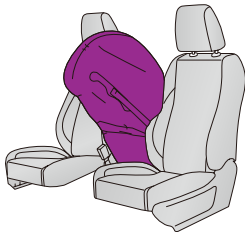



9. Important additional information







Driver's seat has a far side airbag in addition to the side airbag. Location of far side airbag is shown in the mark **9.** on page 1.

10. Explanation of pictograms used

Pictogram	Designation
	Low voltage device that disconnects high voltage
	Remove smart key
	Boot
	Bonnet
	Air-conditioning component

Pictogram	Designation
	Flammable
	Explosive
	Corrosives
	Use thermal Infrared camera

Pictogram	Designation
	Hazardous to the human health
	Use water to extinguish the fire
	Warning, Electricity
	General warning sign

This overview shows the maximum range of equipment of the vehicle.	ID No.	Version No.	Page No.
	LGW-WEY-V61PHEVG	V2	4/4